
Warning Indications

All setting points (Keypads or Tag Readers) have lamps to clearly indicate what is happening.



The '**Alert**' lamp will flash if there is information available to you. Enter your code to see the information. After a code has been entered, one of the following lamps will light: Alarm, tamper or fault. The relevant detail of the problem will be shown on the display. To clear the display, press the 'Yes' key (or the display will clear automatically after 3 minutes.)

The '**Alarm**' lamp will flash after code entry if an alarm occurs.

The '**Tamper**' lamp will flash after code entry if the wiring or equipment is tampered with.

The '**Fault**' lamp will light after code entry to indicate if a technical fault occurs.

The '**Unset**' lamp will light for 5 seconds if the panel is completely Unset (steady) or if some areas remain Set (flashing). It will also light during the setting procedure, going off once set.